

Software Stand November 2007

Einbruchmelder-Zentralen	Zentralen-Software	WINFEM	WINMAG
EMZ 100-AB8 plus	V02.00	WINFEM-AB	V02.01 -
EMZ 100-AB8 plus/AWUG	V02.03	WINFEM-AB	V02.01 -
EMZ 100-AB8 plus/ISDN-AWUG	V03.02	WINFEM-AB	V02.01 -
EMZ 561-HB48	V08.29	WINFEM-100	V03.02 V01.08
EMZ 561-MB8	V08.29	WINFEM-100	V03.02 V01.08 ²⁾
EMZ 561-MB16	V08.29	WINFEM-100	V03.02 V01.08
EMZ 561-MB100	V08.29	WINFEM-100	V03.02 V01.08
EMZ 561-HB24/MB24	V08.10	WINFEM-Advanced	V06.08 V01.08 ²⁾
EMZ 561-HB48 (Index .10)	V08.10	WINFEM-Advanced	V06.08 V01.08
EMZ 561-MB48	V08.10	WINFEM-Advanced	V06.08 V01.08
EMZ 561-MB100 (Index .10)	V08.10	WINFEM-Advanced	V06.08 V01.08
EMZ 561-MB256	V05.12	WINFEM-256	V03.14 V01.08
	oder ab V03.xx	WINFEM-Advanced	V06.08 V01.08
EMZ 561-MB256 plus	V03.00	WINFEM-Advanced	V06.08 V01.08

Brandmelder-Computer	Zentralen-Software	WINFEM	WINMAG
BMC 1016-RS / RS-BUS-Steckkarten	V04.01 / V06.03	V04.03 ¹⁾	V01.08
Bedien- u. Anzeigetableau für RS-BUS 070690	V01.02	V04.03 ¹⁾	V01.08
BMC 1024-F / RS-BUS-Steckkarten	BR V07.04 ZR V07.07 / V05.01	V07.04 ¹⁾	V01.08

¹⁾ = auf gemeinsamer CD - SWINF.00.V09.00

²⁾ = nur in Verbindung mit DS 7500 / DS 8500 / DS 8600 / DGA 2400

IGIS-LOOP-Sicherheitsnetzwerk

IGIS-LOOP-Controller	V04.05
IGLO-KONFIG	V01.00

Wählgeräte

DGA 2400	V02.06
DS 8800	V03.02
DS 6500	V01.03
DS 6600	V01.01
AWAG 6200	V03
DS 8500 ISDN	V02.13
DS 8500 ISDN-Analog	V02.13
DS 7500 ISDN	V07.20
DS 7500 IGIS	V07.06
DS 7600/DS 7700 DS 9500/DS 9600	V02.14
Bootloader für DS 7600/DS 7700	V02.01
Telimadapter	V01.02
IP-Empfangsmodul	V01.03
Telimepfangsmodul	V01.02
ISDN-Empfangsmodul	V03.11
Datex P-Empfangsmodul	V01.06
DS 8600 ISDN	V01.11
DS 8600 ISDN - Analog	V01.11
DS 4000 (in EMZ 100-F8 AWUG)	V01.00
DS 5000 (in EMZ 100-F8 AWUG/ISDN)	V03.01
DEZ 9000	V06.00
DEZ4 WIN	V06.00
PRO-DS	V05.00
PRO-DS 2000	V02.00

WINMAG plus

WINMAG plus Installations CD	V01.07
------------------------------	--------

Zutrittskontrolle

Zutrittskontrollzentrale ACT	V03.09
Zutrittskontrollsystem ACS-1	V06.06
Zutrittskontrollzentrale ACS-2 plus	V07.01
Zutrittskontrollzentrale ACS-8	V07.01
Externer Buscontroller	V02.02
Türmodul	V02.07
Leser-Konverterplatine	V09.01
Zutrittskontroll-Software MultiAccess Lite	V01.09SP1
Zutrittskontroll-Software MAfW	V07.02SP1
Zutrittskontroll-Software IQ MultiAccess	V05.17

Zeiterfassung

ZE-Terminal TRS 6	V02.01
ZE-Terminal TRS 8	V05.03
ZE-Terminal TRS15	V06.01
ZE-und BDE-Terminal TRS 35	V02.00
ZE-und BDE-Terminal TRS 3300	V01.01
NovaTime	V03.5.01